



⚠ ENSURE FIREARM IS UNLOADED

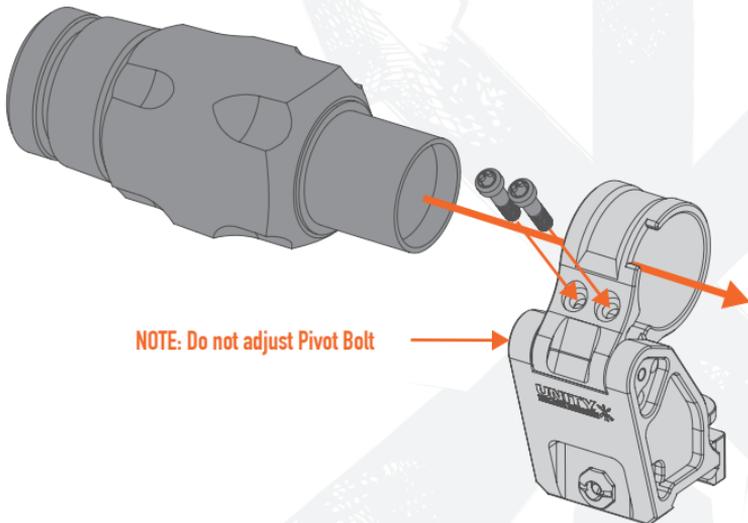

- 1** Loosen screws in FAST Magnifier Mount enough to slide Magnifier tube into ring. Ensure objective face of magnifier clears front wall of mount when rotated down. Ensure the Magnifier is properly oriented in ring when in the active (up) position.
- 2** Tighten screws in FAST Magnifier Mount to finger tight, then another 1/8 - 1/4 turn. **DO NOT EXCEED 35 IN-LBS.** Magnifier will not move in ring when screws are properly installed.

⚠️ ENSURE FIREARM IS UNLOADED

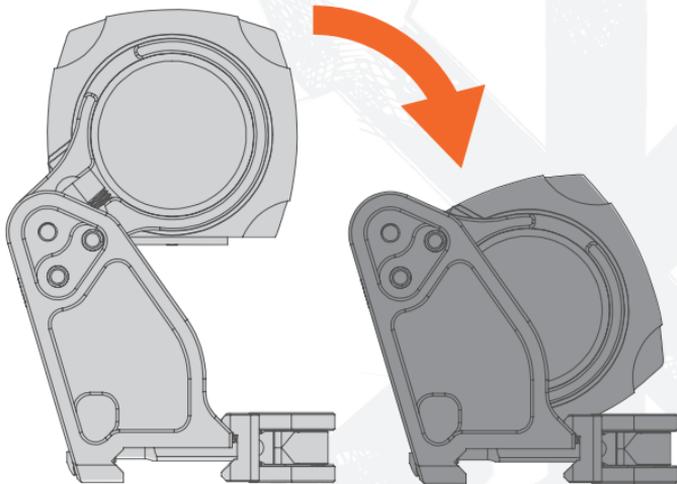

- 3** FAST Magnifier Mount for Aimpoint™ uses a Force-to-Overcome mechanism.
- 4** Grasp magnifier body and pivot assembly down to stow position. Repeat in reverse to bring magnifier back into active position.