


FUSION™ FRONT SIGHT - FIXED INSTALLATION INSTRUCTIONS



⚠️ ENSURE FIREARM IS UNLOADED

⚠️ WARNING: Over-torquing fasteners can damage your mount and will not be covered by warranty.

- 1** Remove clamp and screws from FUSION™ Micro Hub 2.0 to provide access to the top holes. Set aside clamp and screws for re-installation.
- 2** Install FUSION™ Fixed Front Sight on Micro Hub 2.0 using included 10-32 hardware. Secure screws using a T15 bit driver. Lightly snug all screws before applying final torque to any. TORQUE TO 16 IN-LBS.
- 3** Reinstall clamp and screws in the FUSION™ Micro Hub 2.0 and install on weapon rail. Secure screws using a T15 bit driver. Lightly snug all screws before applying final torque to any. TORQUE TO 16 IN-LBS.
- 4** Zeroing procedures are the same as a standard AR15 type front sight. Use a standard front sight tool.

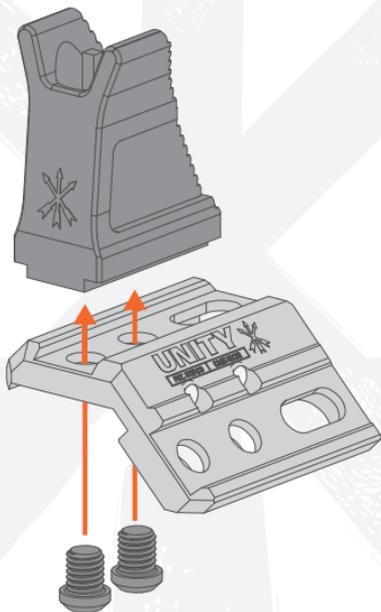

FUSION™ FRONT SIGHT - FIXED INSTALLATION INSTRUCTIONS



⚠ ENSURE FIREARM IS UNLOADED

- 5** FUSION™ Fixed Front Sight is a standard height AR15 height sight that is compatible with all other standard height rear sights (when properly mounted on a FUSION™ Micro Hub 2.0).

