

FASTTM

THERMAL RISER




CONTENTS




PRODUCT OVERVIEW

The FAST™ Thermal Riser brings a thermal up to a 2.05" optical centerline when it is mounted on a UNITY™ CTM™. It can also be used to raise a thermal with an OEM 1.54" clip-on mount to 2.05".

One [1] FAST™ Thermal Riser




Two [2] Clamp Screws



Two [2] Washers



One [1] Rail Clamp





WARNING: ENSURE FIREARM IS UNLOADED




CAUTION: OVER-TORQUING FASTENERS CAN DAMAGE YOUR MOUNT AND WILL NOT BE COVERED BY WARRANTY. USING THREAD LOCKING COMPOUNDS, SUCH AS LOCTITE® OR OTHERS, IS NOT RECOMMENDED AND WILL VOID YOUR WARRANTY.

1

Place the FAST™ Thermal Riser on the M1913 Rail in desired location.

2

Insert each Clamp Screw through a Washer. Then insert them through the FAST™ Thermal Riser and thread them into the Rail Clamp. Secure screws using a T25 bit driver. Lightly snug all screws before applying final torque to any. **Torque to 35 in-lbs [4 Nm].**

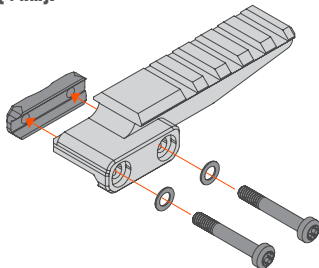

NOTE

Your UNITY® CTM™ should be mounted to the FAST™ Thermal Riser using the hardware provided with the CTM™. This can be done either before or after attaching your FAST™ Thermal Riser on your M1913 Rail at your preference.



INFO@UNITYTACTICAL.COM

©2025 UNITY Tactical. All Rights Reserved.
Specifications subject to change without notice. PAT. UTIP.CO

