## USER INSTRUCTIONS

13

**X UNITY** 

AEMS #AA023282







## CONTENTS



## **PRODUCT OVERVIEW**

The FAST™ AEMS positions Holosun™ AEMS™ optics at a 2.26° optical centerline from the rail. It comes standard with a 2 cross bolt rail clamp, but is compatible with the FAST™ QD (Quick Detach) Lever.



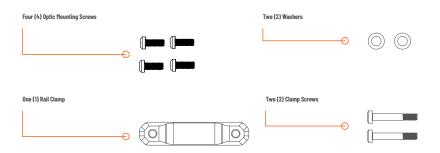




4


OVER-TORQUING FASTENERS CAN DAMAGE YOUR MOUNT AND WILL NOT BE COVERED BY Warranty. Using thread locking compounds, such as loctite® or others, is not recommended and will void your warranty.


Using the UNITY™ supplied Optic Mounting Screws, install the optic to the mount as shown. **Do not exceed** manufacturer's recommended torque spec.

Place the FAST<sup>™</sup> AEMS mount on the M1913 Rail in desired location. If using the included Rail Clamp, move to step 3. If using the optional FAST<sup>™</sup> 0D Lever (sold separately), jump to step 4.

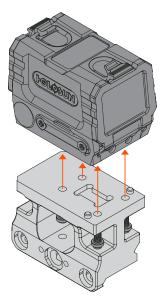

Insert each Clamp Screw through a Washer. Then insert them through the FAST™ AEMS mount and thread them into the Rail Clamp. Secure screws using a T25 bit driver. Lightly snug all screws before applying final torque to any. **Torque to 35** in-Ibs (4 Nm).

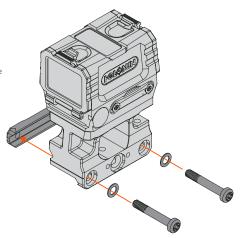

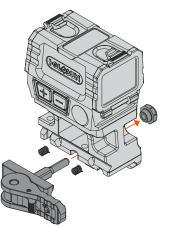



Optional FAST<sup>™</sup> OD (Quick Detach) Lever (sold separately) can be installed in place of the Rail Clamp. Installation instructions are included with the lever.



## INFO@UNITYTACTICAL.COM

©2025 UNITY Tactical. All Rights Reserved. Specifications subject to change without notice. PAT: UTIP.CO



